



PART NUMBER

PFF19-2302

DESCRIPTION

FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 2 x Stainless Steel Washers
- 1 x PTFE Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the wishbones from the vehicle and remove the original rear bush mounting bracket and bush from the wishbone including the removal of the original sleeve of the bush from the wishbone.
2. Clean any dirt and corrosion from the end of the wishbone and fit the washer onto the pin on the end of the arm fitting the smallest diameter first, with the largest radius facing away from the arm. *Figure 1*. It is recommended to use a tube to fit the washer onto the arm, pressing until it sits against the arm.
3. Fit the polyurethane bush into the original mounting bracket in the orientation as per the original part. *Figure 2*.
4. Apply the PTFE/silicone grease to the bore of the bush and insert the wishbone with sleeve and washer fitted into the corresponding bush and bracket assembly with the wishbone pin fitting into the stepped section of the bush first, as shown in *Figure 2*.
5. Re-fit the arm and wishbone bracket to the vehicle and tension all hardware to manufacturers recommended torque settings.

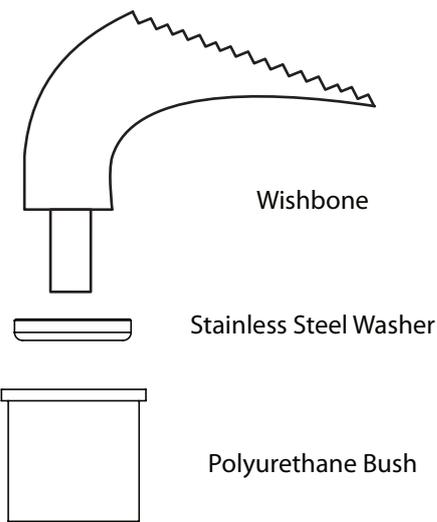


Figure 1 Exploded View



Figure 2 Assembled View