

POWERFLEX®

PART NUMBER

PFF88-1001

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE Silicone Grease

2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove original bush, including outer shell, from the front wishbone.
2. Clean any dirt or corrosion from the bore in the arm and file off any sharp edges.
3. Push in the new polyurethane bush with the chamfered edge getting pushed in first, from the front of the car, as shown in step 1 in Figure 1. *Tip: It may be necessary to apply washing up liquid to ease fitting the bush.*
4. Apply some of the supplied grease to the bore of the polyurethane bush.
5. Push the sleeve into the bore of the polyurethane bush so that it sits flush inside, as shown in step 2 in Figure 1.
6. Re-fit the arm to the car and tension all hardware to manufacturers recommended torque settings.

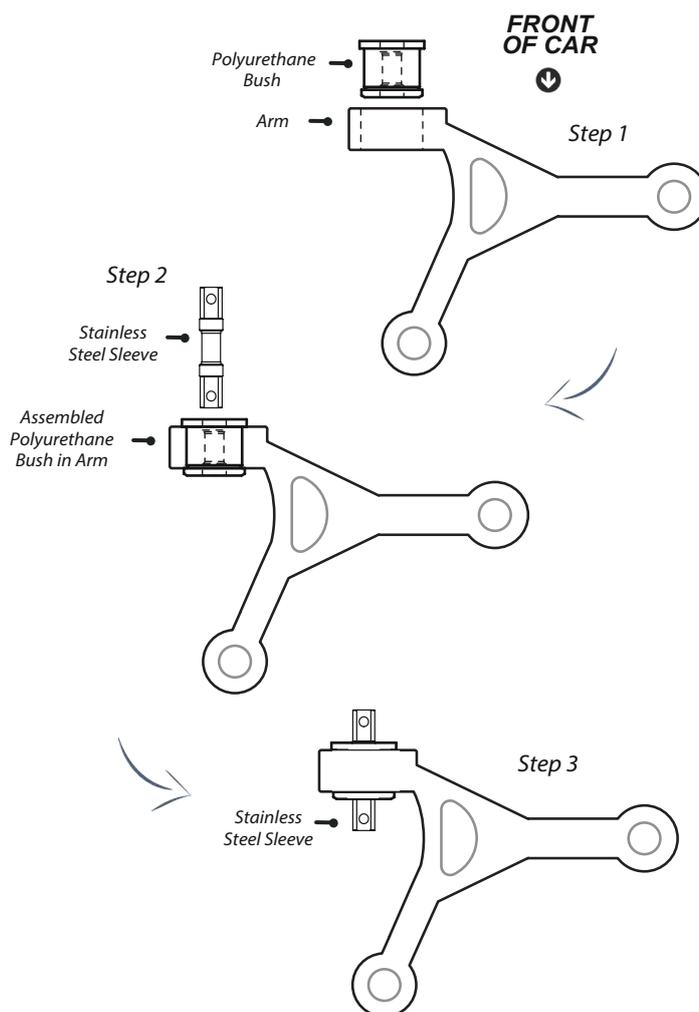


Figure 1 - showing the sequential steps in assembling this part in the arm